

Safe Families
Safe Communities




LOCKING PILL BOTTLES (LPBs®) Cap Encoding Instruction Guide

Our product was invented by a physician with the simple idea that locking pill bottles (LPBs) can protect individuals, families, and communities from improper access to medications, reduce intentional or accidental overdose, and cut off pilfering (sneaking pills) which is the #1 source for teen drug misuse.

Safe Rx Locking Pill Bottles are the smart, easy and affordable way to store your medications at home, work, school or while traveling.

Encoding Process Instructional Video

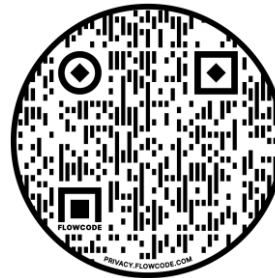

Please scan this QR barcode with your phone for a simple instructional video on how the Safe Rx LPB® cap encoding process works.

Illustrated Cap Encoding Process Instructions



Step 1: Align your 4-digit code with the arrow located on the top of the cap, in order from left to right towards the arrow

Step 2: Align the white front guide with the lined up 4-digit code and press firmly down on the encoder 2-3 times

Step 3: Check the tabs underneath the 4-digit code to ensure the square engagement tabs under the rings were fully sheared off during the encoding process

Step 4: Register your code at: safe-rx.com/account or store your code in a safe and private place



CAUTION: the encoder includes a sharp blade and should be handled and used with caution. The blade is protected by an exterior guide and is not exposed unless the encoder is tampered with or broken. Do not disassemble or tamper with the encoder or there is a risk of being cut by the blade. For more information on how to encode, please visit www.safe-rx.com or call us at (833) 288-SAFE.